



AVAC 6 OPERATOR'S MANUAL



CONTENTS

<i>Safety Warnings For Dry Vacuum Cleaner</i>	2
<i>Danger Levels</i>	2
<i>Electrical Connections</i>	3
<i>Filter Maintenance</i>	3
<i>Proper Storage</i>	3
<i>Safety</i>	4
<i>Limited Warranty</i>	4
<i>About the Vacuum</i>	5
<i>Preparing the Vacuum</i>	5
<i>Preparing to Work</i>	6
<i>Work</i>	6
<i>Emptying the Collection Tank</i>	7
<i>At the End of Work</i>	7
<i>Maintenance</i>	7
<i>Disposal</i>	8
<i>Troubleshooting</i>	9
<i>Warranty</i>	10

SAFETY WARNINGS FOR A DRY VACUUM CLEANER



Before using the machine for the first time, read and comply with these safety warnings. Keep these safety warnings for consultation in the future or to hand them over to successive owners.

- Before commissioning, read the machine's user manual.
- The warning plates on the machine provide important instructions for its safe use.
- Always comply with both the directions on the instructions, as well as current safety standards.
- Keep the packing film out of the reach of children. Risk of asphyxiation!

DANGER LEVELS



DANGER: Indicates an imminent danger that could cause serious injury or death.



WARNING: Indicates a probable dangerous situation that could cause serious injury or death.



CAUTION: Indicates a probable dangerous situation that could cause minor injuries.



ATTENTION: Indicates a probable dangerous situation that could damage objects.

ELECTRICAL CONNECTIONS

Electrical Cord Care:

Never stretch the cord tightly between the vacuum and the outlet. A cord that is stretched or pulled will not function properly and creates a danger. After vacuuming, unplug the cord and wind it up loosely. Do not wind the cord up by wrapping around your hand and elbow.

Grounding Instructions:

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having equipment grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


WARNING:

Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded.

Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120 - Volt circuit and has a grounded plug that looks like the plug illustrated in sketch A below. A temporary adapter that looks like the adapter illustrated in sketches B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded receptacle is not available.

The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

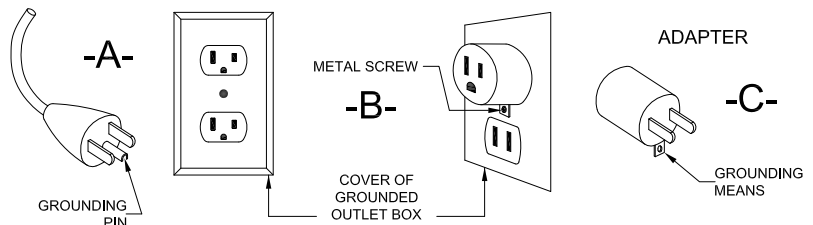

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

FILTER MAINTENANCE

- (1) Prior to use, check the condition of the disposable paper filter bag. If used, a clogged filter bag will restrict airflow, reducing vacuum performance and increasing the likelihood of motor overheating.
- (2) When necessary, hand or machine wash the cloth dust bag and let air-dry before replacing inside the vacuum. DO NOT put dust bag inside machine dryer.
- (3) Do not attempt to clean HEPA filter. If there is a lack of airflow after replacing the disposable paper filter bag and cloth dust bag, it will be necessary to replace the HEPA filter.
- (4) Rinse clean and air-dry the foam filter (below motor) when clogged. A damaged foam filter should be replaced before operating the vacuum.

PROPER STORAGE

When the vacuum is not in use, it should be stored in a dry place.

SAFETY**Important Safety Instructions:**

When using an electrical vacuum, basic safety precautions should always be followed, including the following: **READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM CLEANER**



WARNING: To reduce the risk of fire, electrical shock, or injury:

- (1) Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- (2) Do not expose to rain. Store indoors.
- (3) Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- (4) Use only as described in this manual. Use only manufacturer's recommended attachments.
- (5) Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, contact Customer Service.
- (6) Do not pull or carry by cord, use as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliances over cord. Keep cord away from heated surfaces.
- (7) Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- (8) Do not handle plug or appliance with wet hands.
- (9) Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- (10) Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- (11) Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- (12) Do not use without dust bag and/or filters in place.
- (13) Turn off all controls before unplugging.
- (14) Use extra care when cleaning on stairs.
- (15) Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- (16) This vacuum is for commercial use only.
- (17) Connect to a properly grounded outlet only. See grounding instructions.

SAVE THESE INSTRUCTIONS**LIMITED WARRANTY**

The vacuum cleaner is warranted for 1 year from the date of purchase. Parts not covered under warranty are power cords, filters, motor brushes and squeegee blades. The warranty covers only failure due to defective parts or workmanship and will be invalidated by improper application and abuse.

Under no circumstances should you return a failed unit to the factory. If you experience any problems with your vacuum during the warranty period, contact the Customer Service Department.

ABOUT THE VACUUM

MODEL: AVAC 6

Congratulations on your purchase of an American Sanders AVAC 6 vacuum. You have purchased a high quality commercial vacuum cleaner. For your safety and continued satisfaction with this product, please read this owner's manual carefully before using. For your information, all parts used in the manufacturing of this vacuum cleaner meet or exceed rigid quality control standards. We stand behind all our products and are available to assist you with a knowledgeable and dedicated staff. If we can help you in any way, please call Customer Service at 800-367-3550.

We also recommend that you visit our website, americansanders.com, for the most efficient way to complete your product registration and see other products and accessories to meet your floor sanding and finishing needs.

PREPARING THE VACUUM

INSPECTION

Carefully unpack and inspect your new vacuum for shipping damage. Contents should be as shown.


HOW TO UNPACK

1. Open the outer box.
2. Take out the inner packaging.
3. Remove the vacuum from the box using the handle, being careful not to damage either during the operation.

⚠ CAUTION: Users are advised to always wear protective gloves, to avoid the risk of serious injury to hands.

HOW TO TRANSPORT

1. Take all necessary steps to ensure that the device is in a safe condition (see "MACHINE SAFETY").
2. Remove the vacuum hose (1) from the vacuum nozzle (2) on the collection tank, before pulling the vacuum hose press the button (3) for unlocking the catch. (figure 1)

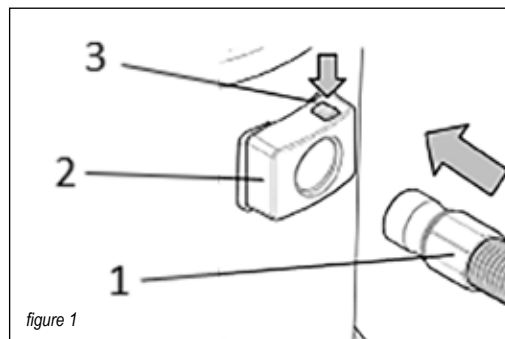

3. Insert the appliance into the carton, taking care not to damage either during this operation.
4. Insert the accessories support and the head block inside the carton.
5. Place the accessories in the carton.
6. Close the carton.

NOTE: For transportation in vehicles, secure the device according to the regulations in force so that it can not slide or tip over.

⚠ CAUTION: Users are advised to always wear protective gloves, to avoid the risk of serious injury to hands.

MACHINE SAFETY

The stages for making the machine safe, thereby making it possible to carry out operations safely, are as follows:

1. Check that the power switch is disabled; if not, set it to "0".
2. Make sure that the plug on the power cable has been taken out of the mains supply socket, and if not, disconnect it.
3. Wind up the power cable.

⚠ CAUTION: We recommend handling the power cable with dry hands to avoid serious injury.

⚠ CAUTION: To prevent damaging the power cable, disconnect the plug from the mains socket by directly pulling the plug and not the cable.

PREPARING TO WORK

INSERTING THE COLLECTION BAG-FILTER (OPTIONAL)

To insert the filter – collection bag inside the collection tank, proceed as follows:

1. Take all necessary steps to ensure that the device is in a safe condition (see "MACHINE SAFETY").
2. Remove the vacuum head using the handle on it. Before removing the head, loosen the locking catches on the side of the collection tank.
3. Rest the vacuum head gently on the floor.
4. Insert the filter - paper collection bag inside the collection tank, taking care to insert the filter correctly into the vacuum nozzle inside the collection tank and making sure not to damage the cardboard support in the bag itself.
5. Refit the vacuum head above the collection tank, remembering to fix it to the tank using the locking hooks.

NOTE: If you are using the collection bag filter the permanent fabric filter needs to be removed.

PREPARING THE MACHINE

Before beginning to work, it is necessary to:

1. Check that the switch is disabled; if not, set it to "0".
2. Make sure that the plug on the power cable has been taken out of the mains supply socket, and if not, disconnect it.

 **WARNING:** To prevent damaging the power cable, disconnect the plug from the mains socket by directly pulling the plug and not the cable.

3. Remove the vacuum head using the handle on it. Before removing the head, loosen the locking catches on the side of the collection tank.
4. Make sure that the cloth filter is correctly positioned.

NOTE: If cartridge filters or dust collection bags are used instead of the cloth filter, make sure they are positioned correctly.

5. Put back the vacuum head on top of the collection tank, remembering to secure it with the hook catches.
6. Before using, the appliance must be in order and safe to use with the work equipment, especially the power cable and the extension cable. If everything is not in order, the appliance must not be used.

WORK

VACUUMING DRY OBJECTS

To vacuum dry objects, do as follows:

1. Insert the vacuum hose into the inlet on the collection tank. To remove the hose, press the button for unlocking the catch.
3. Insert the plug of the power supply cable in the mains supply socket.

 **ATTENTION:** Do not exceed the maximum mains impedance value allowed for the electrical connection point (see Technical Data). Please contact your electrical energy supplier if in doubt concerning mains impedance on the connecting point.

 **CAUTION:** Do not insert the power cable into the socket of the mains plug with wet hands.

4. Switch on the machine by setting the main switch to "I".
5. Start work.

 **ATTENTION:** Risk of damage! If dry vacuuming, never remove the cloth filter while vacuuming. Vacuuming fine dust requires the replacement of the cloth filter with a more appropriate cartridge filter (optional component).

If, when working, a reduction in the vacuum power is noted or the noise of the appliance becomes louder:

- Switch off the appliance by positioning the main switch to the rest position, "0".
- Remove the plug of the power supply cable from the mains supply socket.

 **WARNING:** To prevent damaging to the mains socket, disconnect the plug from the mains socket by directly pulling the plug and not the power cable.

- Remove the vacuum head using the handle on it. Before removing the head, loosen the locking catches on the side of the collection tank.
- Remove the cloth filter from inside the tank, shake it and clean the cloth filter.

NOTE: If the surface of the filter is extremely dirty, brush the filter with a normal soft brush to clean it thoroughly.

- Empty the collection tank.

NOTE: The place intended for this operation must comply with local environmental regulations.

- Repeat the operations in reverse order to start working again.

NOTE: If the previous operations have not resolved the low vacuum, switch off the machine and remove blockage from the vacuum hose or from the accessories being used.

EMPTYING THE COLLECTION TANK

At the end of the work, and before carrying out any type of maintenance, perform the following operations:

1. Take the appliance to where its collection tank is emptied.

NOTE: the place designated for this operation must comply with current environmental protection regulations.

 **CAUTION:** These operations must be carried out using gloves to protect the hands.

2. Switch off the appliance by setting the main switch to "0".
3. Remove the plug on the power cable from the mains power supply socket.

 **WARNING:** To prevent damaging the power cable, disconnect the plug from the mains socket by directly pulling the plug and not the cable.

4. Remove the vacuum head using the handle on it. Before removing the head, loosen the locking catches on the side of the collection tank.
5. Empty the collection tank.

NOTE: If there is a cloth filter, remove it from inside the collection tank before emptying the appliance.

NOTE: If present, remove the filter - collection bag from inside the collection tank, being careful not to rip it. If the bag is made of paper, dispose of it properly, but if it is made of fabric just empty it.

NOTE: If there is the rapid emptying kit, proceed as follows:

- Remove the discharge hose from the catch of the collection tank.
 - Unscrew the cap and place the hose on the discharge surface and gradually release the hose.
6. Refit all the parts.

AT THE END OF WORK

At the end of the work, and before carrying out any type of maintenance, perform the following operations:

1. Take the appliance to where its collection tank is emptied.

NOTE: the place designated for this operation must comply with current environmental protection regulations.

 **CAUTION:** These operations must be carried out using gloves to protect the hands.

2. Switch off the appliance by setting the main switch to "0".

MAINTENANCE

Properly cleaning the vacuum unit makes sure the appliance works efficiently and effectively when operating, to carry out maintenance do as follows:

1. Take all necessary steps to ensure that the device is in a safe condition (see "MACHINE SAFETY").
2. Remove the vacuum head using the handle on it. Before removing the head, loosen the locking catches on the side of the collection tank.
3. Rest the vacuum head gently on the floor.

NOTE: If the surface of the filter is extremely dirty, brush the filter with a normal soft brush to clean it thoroughly, and if necessary wash it in water.

ATTENTION: Check the condition of the foam filter if the filter surface area is particularly clogged or if it is damaged replace it.



4. If present, remove the cloth filter (6) and clean it. When it is dry put back the cloth filter.

NOTE: If the surface of the filter is extremely dirty, brush the filter with a normal soft brush to clean it thoroughly, and if necessary wash it in water.

NOTE: If cartridge filters or dust collection bags (cotton version) are used instead of the cloth filter, clean them with a jet or air and check the state of their wear, and if necessary replace them.



ATTENTION: Check the condition of the cloth filter if the filter surface area is particularly clogged or if it is damaged replace it.

ENGLISH

5. Clean the inside of the collection tank with a damp cloth.
6. Put back the vacuum head on top of the collection tank, remembering to secure it with the hook catches.
7. Disconnect the vacuum hose from the vacuum nozzle on the collection tank, before pulling the vacuum hose press the release button.
8. Clean the inside of the vacuum hose with a jet of compressed air, if necessary removing any obstructions.
9. Disconnect the cleaning accessory.
10. Clean the inside of the vacuum chamber of the accessory with compressed air, and if necessary remove any obstructions.

DISPOSAL

To dispose of the appliance, take it to a demolition center or an authorized collection center.

Before scrapping the appliance, it is necessary to remove and separate out the following materials, then send them to the appropriate collection centers in accordance with applicable environmental hygiene regulations:


- Electric and electronic parts*
- Plastic parts (tanks and handlebars)
- Metal parts (levers and frame)

(*) In particular, contact your distributor when scrapping electric and electronic parts.

TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE	SOLUTION
THE APPLIANCE DOES NOT SWITCH ON	The main switch is not activated.	Press the main switch.
	The plug on the appliance's power cable has not been correctly inserted into the mains socket.	Connect the plug on the appliance's power cable to the mains socket.
	The electrical specifications of the appliance do not match the electrical specifications of the power supply network.	Check that the technical data on the appliance's serial number plate match the data of the mains supply.
	The power cable is damaged.	Contact a specialized technician immediately.
INSUFFICIENT VACUUM - EXCESSIVE DUST PRODUCTION	The vacuum hose is not connected correctly to the nozzle on the collection tank.	Connect the vacuum hose correctly to the nozzle on the collection tank.
	The vacuum hose is not connected correctly to the extension hose.	Connect the vacuum hose correctly to the extension hose.
	The extension hose is not connected correctly to the vacuum accessory being used.	Connect the extension tube correctly to the vacuum accessory being used.
	The vacuum circuit is blocked (vacuum hose; extension hose; vacuum accessory).	Remove the obstruction in the vacuum circuit.
	There is a blockage in the vacuum filters.	Clear the obstruction in the vacuum filters.

MAIN ASSEMBLY

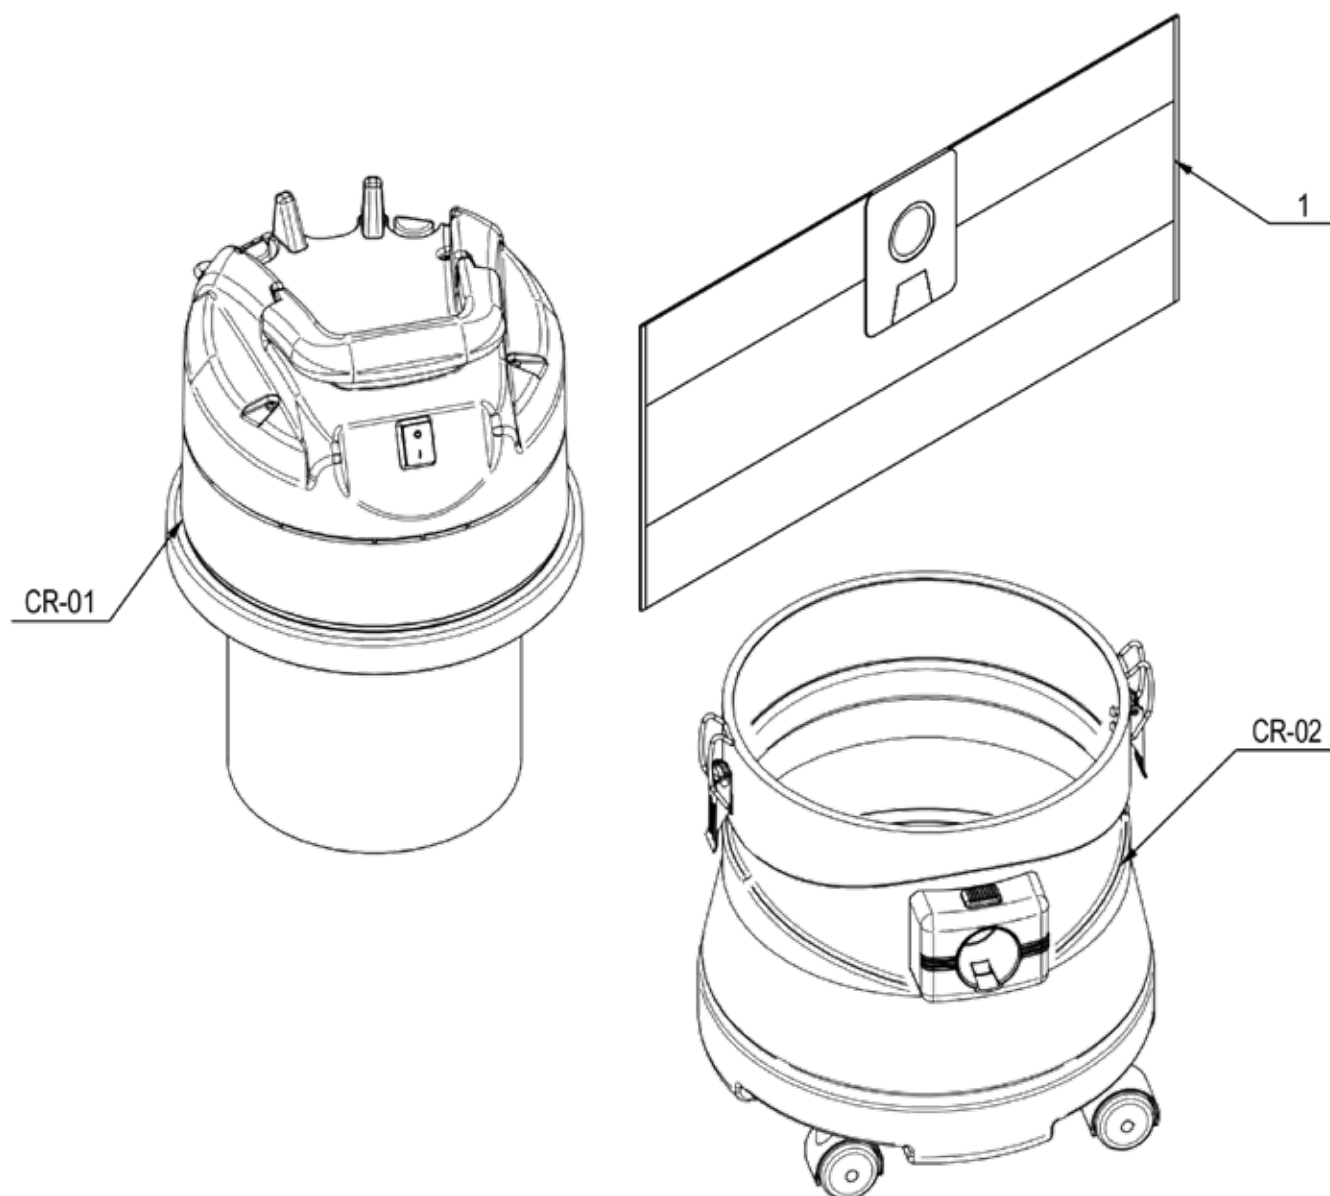


Item	Ref. No.	QTY	DESCRIPTION
CR-01	TMB234462	1	VACUUM GROUP
CR-02	TMB234490	1	TANK GROUP P12
CR-04	TMB234489	1	ACCESSORIES KIT
1	TMB443004	1	FILTER MICROFIBER D56 VERT. H245L580
	TMB227762		PAPER DUST BAG (NOT SHOWN)

VACUUM MOTOR AND COVER ASSEMBLY

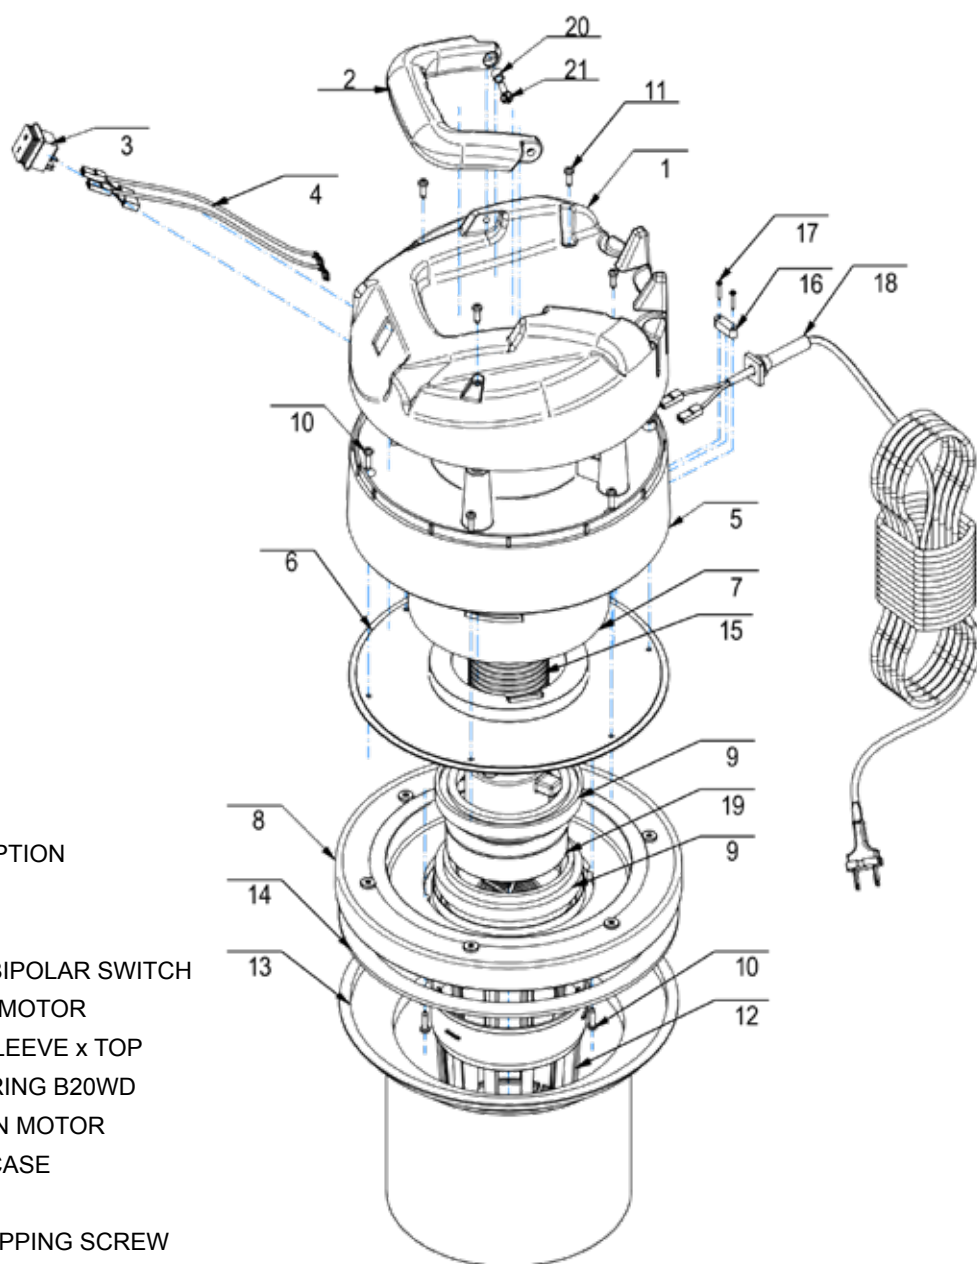


Item	Ref. No.	QTY	DESCRIPTION
1	TMB444299	1	COVER
2	TMB444235	1	HANDLE
3	TMB417622	1	BLACK BIPOLAR SWITCH
4	TMB416994	1	WIRING MOTOR
5	TMB445059	1	GREY SLEEVE x TOP
6	TMB416890	1	BLACK RING B20WD
7	TMB417459	1	SUCTION MOTOR
8	TMB400903	1	CRANKCASE
9	TMB440280	2	GASKET
10	TMB418279	8	SELF-TAPPING SCREW
11	TMB418277	4	SELF-TAPPING SCREW
12	TMB417138	1	FLOAT CAGE
13	TMB204652	1	FILTER ASSEMBLY
14	TMB412463	1	GASKET MOTOR BASE
15	TMB401001	1	PIPE
16	TMB409765	1	CABLE GRIP
17	TMB418269	2	SELF-TAPPING SCREW
18	TMB222605	1	CABLE
19	TMB439548	1	MOT. MON. 800W DRY
20	TMB455825	2	BUSHING
21	TMB455827	2	SCREW

TANK ASSEMBLY

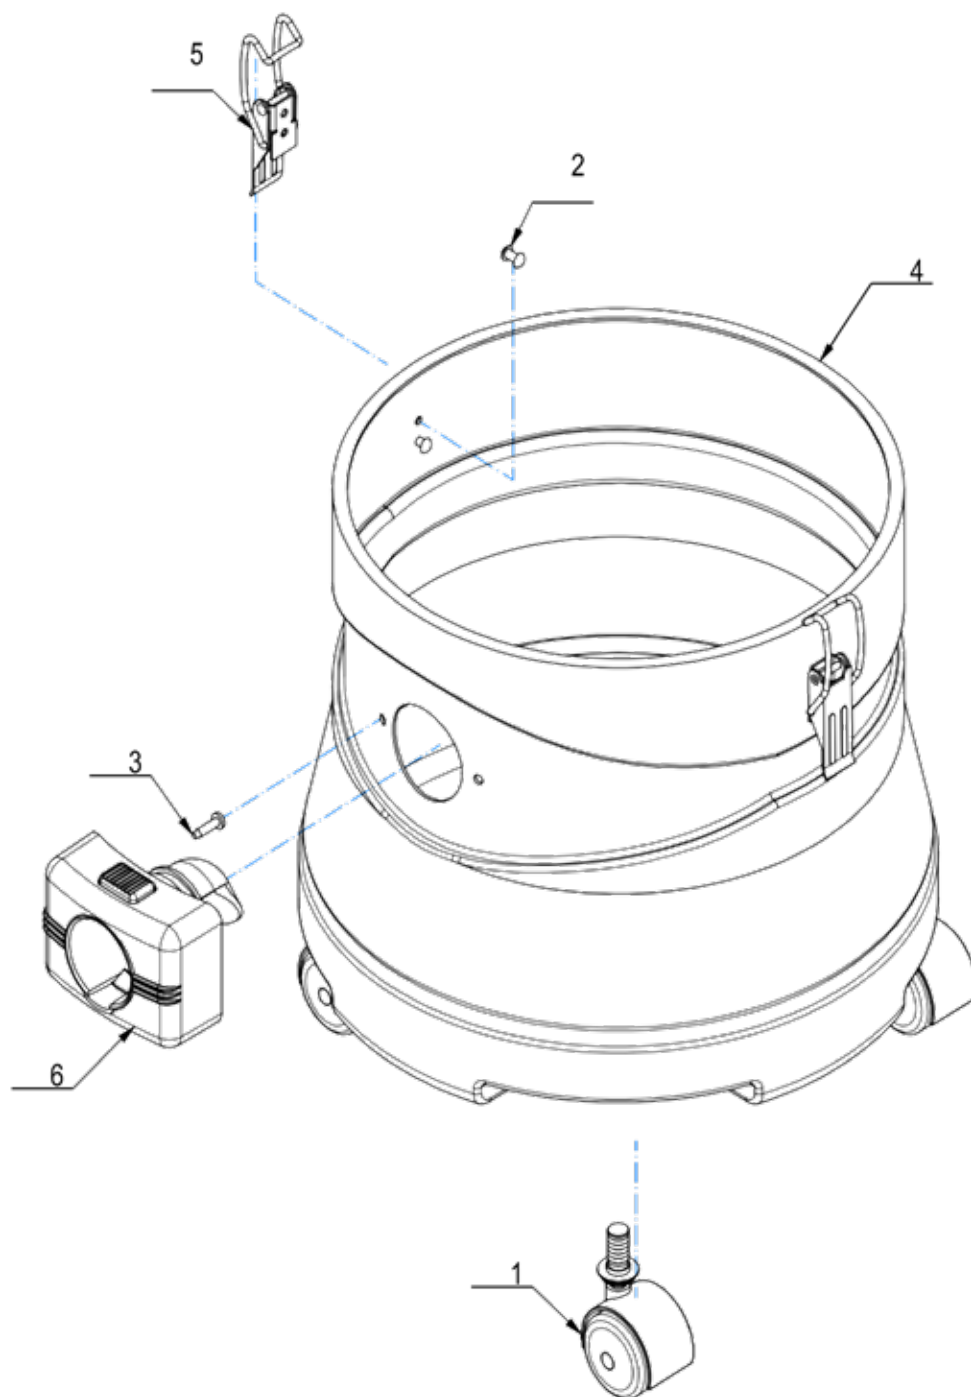

Item	Ref. No.	QTY	Description
1	TMB418028	4	PIVOT WHEEL D.50
2	TMB409360	4	RIVET
3	TMB418279	2	SELF-TAPPING SCREW 4,8x19 SP
4	TMB445800	1	TANK
5	TMB417506	2	STEEL LATCH x COVER/TANK
6	TMB449318	1	OPENING

HOSE ASSEMBLY

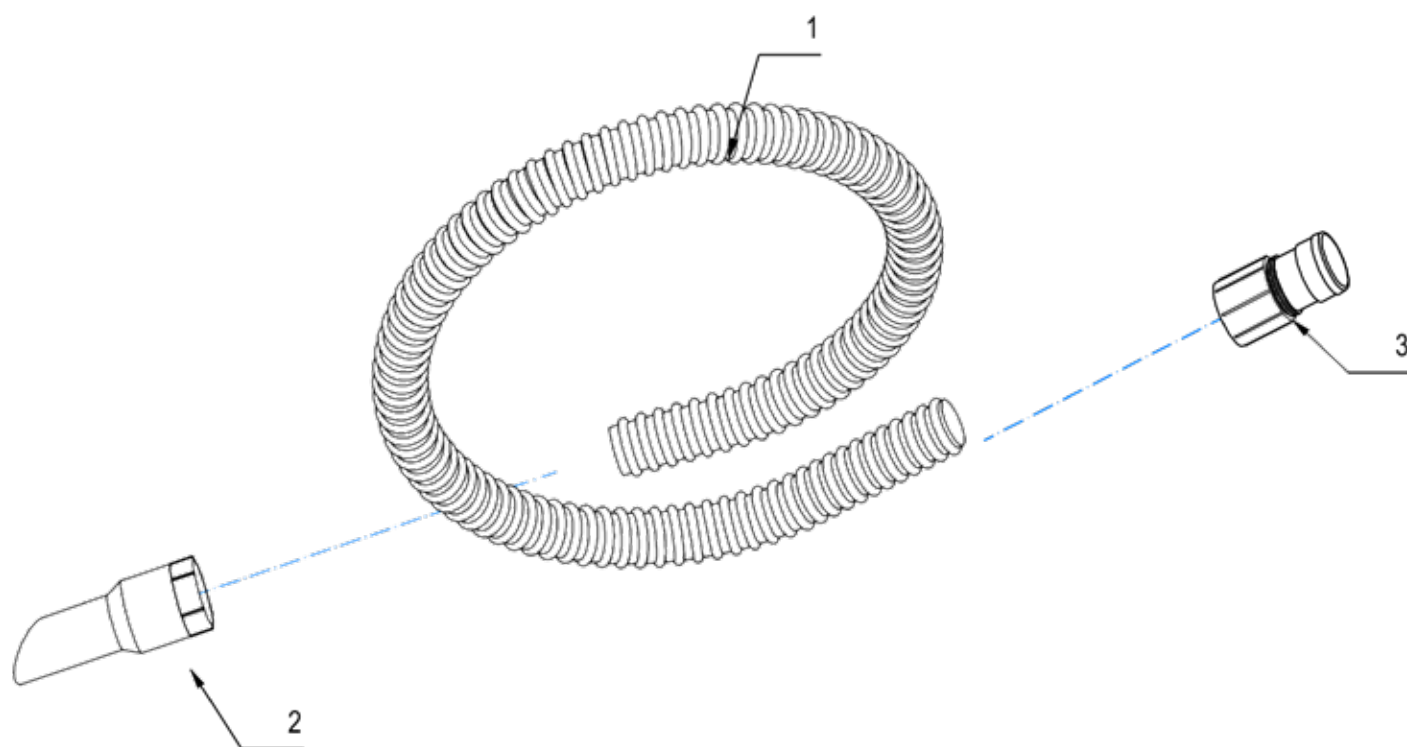

Item	Ref. No.	QTY	Description
1	TMB400999	1	SUCTION HOSE
2	TMB417735	1	CUFF
3	TMB449357	1	MALE COUPLING

Limited Warranty

AVAC 6 - 07250A

TO QUALIFY FOR THIS WARRANTY

- (1) Machine must be registered at the time of purchase on a form provided by American Sanders. Your American Sanders Distributor is responsible for the registration of your machine. Please cooperate with your Distributor in supplying necessary information on the card.
- (2) The machine must have been purchased from American Sanders or an authorized American Sanders Distributor.
- (3) This warranty extends to the original purchaser only and is not transferable to subsequent owners.

TIME PERIODS

- (1) ONE (1) YEAR WARRANTY - For the 07250A. Warranted to be free from defects in material and workmanship for a period of one (1) year from the date of purchase by the original owners. (See Exclusions)

EXCLUSIONS (Not Covered by Warranty)

- (1) Parts that fail through normal wear by reason of their characteristics (cords, hoses, & etc.).
- (2) This warranty does not extend to parts affected by misuse, neglect, abuse or improper maintenance. All defective parts must be returned to the distributor for credit.

THE OBLIGATION OF AMERICAN SANDERS

- (1) The obligation of American Sanders under this warranty is limited to repairing or replacing, at its option, any part which is proven to be defective in material or workmanship under normal use for the applicable period stated above.
- (2) Warranty repairs will be made by your American Sanders Distributor without charge for parts and labor. They will be compensated with a warranty labor rate of \$75.00 per hour, for the first year of ownership.
- (3) Parts repaired or replaced under this warranty are warranted only during the balance of the original warranty period. All defective parts replaced under these warranties become the property of American Sanders.

WARRANTY SERVICE

To obtain warranty service, take your machine and proof of purchase to any authorized American Sanders Distributor. American Sanders will not reimburse expenses for service calls or travel. For the Distributor in your area, call American Sanders Customer Service Department at 800-367-3550 or 336-372-8080. If you are dissatisfied with the service that you receive, call or write American Sanders Customer Service Department for further assistance.

INSTRUCTIONS AND CONDITIONS FOR WARRANTY REIMBURSEMENT

- Order replacement part: Orders will be processed and charged, as normal procedure.
- Call American Sanders for R/A number.
- You will need the Engine Serial Number, Machine Serial Number, and the Machine Model Number.
- Parts must be returned, accompanied with the R/A number to be eligible for warranty credit.
- All Warranty Parts will be shipped prepaid UPS Ground, any other method will be at the recipients expense.
- Freight on any Warranty Part after 30 days must be paid for by the Purchaser.
- Warranty labor rate is \$75.00 per hour.
- Credit will be issued upon completion of the above steps, at the above rates.

DISCLAIMER OF CONSEQUENTIAL

AMERICAN SANDERS DISCLAIMS ANY RESPONSIBILITY FOR LOSS OF USER TIME OF THE AMERICAN SANDERS MACHINE OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGE EXCEPT AS STATED IN THE WARRANTY APPLICABLE TO EACH MACHINE. EXCEPT AS STATED IN SUCH WARRANTIES, THE COMPANY DOES NOT OTHERWISE WARRANT ANY MACHINE AND NO WARRANTY, EXPRESS, IMPLIED OR STATUTORY IS MADE BY THE COMPANY.

© 2026 American Sanders

Garantie limitée

AVAC 6 - 07250A

POUR ÊTRE ADMISSIBLE À LA PRÉSENTE GARANTIE

- (1) L'appareil doit être inscrit au moment de l'achat à l'aide de la fiche fournie par American Sanders. L'enregistrement de votre appareil s'effectue auprès de votre distributeur American Sanders. Veuillez lui fournir tous les renseignements exigés sur la fiche.
- (2) L'appareil doit avoir été acheté auprès d'American Sanders ou d'un distributeur American Sanders autorisé.
- (3) La présente garantie n'est offerte qu'à l'acheteur initial et n'est pas transférable aux propriétaires subséquents.

PÉRIODES

- (1) GARANTIE D'UN (1) AN — Pour le modèle 07250A.
Garanti contre tout défaut de matériaux et de main-d'œuvre pour une période d'un (1) an à compter de la date d'achat par le propriétaire initial. (Se reporter aux exclusions.)

EXCLUSIONS (non couvertes par la garantie)

- (1) Les pièces qui font défaut par suite d'une usure normale en raison de leurs caractéristiques (cordons, tuyaux, etc.).
- (2) Cette garantie ne couvre pas les pièces affectées par une mauvaise utilisation, des abus, de la négligence et un entretien inadéquat. Vous devez retourner les pièces défectueuses au distributeur pour vous les faire créditer.

LES OBLIGATIONS D'AMERICAN SANDERS

- (1) Les obligations d'American Sanders en vertu de cette garantie se limitent à la réparation ou au remplacement, à sa discrétion, de toute pièce présentant un défaut avéré de matériaux ou de main-d'œuvre dans le cadre d'une utilisation normale pour la période applicable énoncée plus haut.
- (2) Les réparations sous garantie seront effectuées par votre distributeur American Sanders sans frais pour les pièces et la main-d'œuvre. Ce dernier sera rémunéré au taux de main-d'œuvre de 75,00 \$/h pour la première année de possession.
- (3) Les pièces réparées ou remplacées en vertu de cette garantie sont garanties seulement durant la période restante de la période de garantie originale. Toutes les pièces défectueuses remplacées en vertu de ces garanties deviennent la propriété d'American Sanders.

SERVICE SOUS GARANTIE

Pour obtenir du service sous garantie, apportez votre appareil et une preuve d'achat chez un distributeur American Sanders autorisé. American Sanders ne remboursera pas de frais engagés en lien avec des appels de service ou des déplacements. Pour connaître le distributeur de votre région, communiquez avec le service à la clientèle d'American Sanders au 800 367-3550 ou au 336 372-8080. Si vous n'êtes pas satisfait du service reçu, communiquez avec le service à la clientèle d'American Sanders pour obtenir de l'aide.

INSTRUCTIONS ET CONDITIONS POUR L'OBTENTION D'UN REMBOURSEMENT SOUS GARANTIE

- Commande de pièce de rechange : Les commandes sont traitées et facturées comme toute procédure normale.
- Communiquez avec American Sanders pour obtenir un numéro d'autorisation de renvoi.
- Vous aurez besoin du numéro de série du moteur, du numéro de série de la machine et du numéro de modèle de la machine.
- Vous devez joindre le numéro d'autorisation de renvoi aux pièces renvoyées pour être admissible au crédit en vertu de la garantie.
- Toutes les pièces sous garantie sont expédiées UPS Ground prépayé; tout autre moyen d'expédition est au frais du destinataire.
- Le transport de toute pièce sous garantie après 30 jours doit être payé par l'acheteur.
- Le taux de main-d'œuvre sous garantie est de 75,00 \$/h.
- Le crédit est émis une fois toutes les étapes précédentes terminées, aux tarifs précités.

AVIS DE NON-RESPONSABILITÉ POUR LES DOMMAGES INDIRECTS

AMERICAN SANDERS SE DÉGAGE DE TOUTE RESPONSABILITÉ À L'ÉGARD DU TEMPS D'UTILISATION DE L'APPAREIL AMERICAN SANDERS PERDU ET DE TOUT AUTRE DOMMAGE ACCESSOIRE OU CONSÉCUTIF, À L'EXCEPTION DE CE QUI EST ÉNONCÉ DANS LA GARANTIE QUI S'APPLIQUE À LA MACHINE. À L'EXCEPTION DE CE QUI EST ÉNONCÉ DANS DE TELLES GARANTIES, L'ENTREPRISE NE GARANTIT PAS AUTREMENT TOUTE MACHINE ET AUCUNE GARANTIE EXPRESSE, IMPLICITE OU STATUTAIRE N'EST DÉLIVRÉE PAR L'ENTREPRISE.

© 2026 American Sanders



AMERICAN SANDERS

AN AMANO COMPANY

1 Eclipse Rd., PO Box 909
Sparta, North Carolina 28675, USA
www.pioneereclipse.com
www.americansanders.com

+1-336-372-8080
1-800-367-3550
Fax 1-336-372-2913